## **NU-100**

Digital Surface Temperature Gauge



Features include a battery powered LCD temperature display, a 10 foot waterproof probe, and built-in suction cups for easy mounting.

## Sensor Installation:

To measure the water temperature, the sensor should be mounted to assure contact with the water at all times. A common location is towards the middle of the stern on the boat.

- 1. Slip the end of the thermostat probe through the rubber "o" ring
- 2. Snap "o" ring over end of suction cup
- 3. Adjust probe to desired depth
- 4. Attach to clean, smooth surface.

## Specifications:

Range: -40°F to 122°F with .1°F Resolution Size: 2.4" Square Case (Water Resistant)

Display: 5" LCD

Mounting: Suction Cups

Power: 1.5v SR-44 Button Battery

Sensor: Plain .25" x 1" stainless steel on a 10ft coated copper wire

## **NUºTemp**

Pal Products, Inc.
P.O. Box 905, Wisconsin Rapids, WI 54495
Phone: (715) 421-0445 Fax: (715) 422-6849
www.nu-temp.com information@nu-temp.com